



XCG-5005E



XCG-U100E



XCG-SX99E



XCG-SX97E



XCG-V60E



XCG Series

Digital Camera Modules



- XCG-5005E
- XCG-U100E
- XCG-SX99E
- XCG-SX97E
- XCG-V60E

The XCG Series from Sony incorporates the GigE Vision interface, which is specifically standardised for machine vision applications based on Gigabit Ethernet technology.

XCG-5005E
XCG-U100E
XCG-SX99E
XCG-SX97E
XCG-V60E



Sony proudly introduces a new camera to its **XCG Series** of high-quality, high-performance digital interface cameras: the new XCG-SX99E, a higher frame rate version of the XCG-SX97E.

In accordance with the growing demand for large-scale systems, this interface enables the cameras to transfer a large amount of data over long distances. The use of an Ethernet cable and availability of a wide variety of peripheral devices contribute to significant cost-cutting benefits when designing a complete vision system. Moreover, by incorporating a packet re-send mechanism, the XCG Series can securely transmit data to the host computer.

The newly expanded XCG Series now consists of five models – the XCG-5005E, the XCG-U100E, the XCG-SX99E, the XCG-SX97E, and the XCG-V60E. Each camera varies in resolution and frame rate, and offers unique benefits that users have come to expect from Sony’s camera products. These cameras retain some of the same functionality found in Sony’s renowned XCD Series such as bulk trigger mode, sequential trigger mode, and a partial scanning function. In addition, the XCG-SX99E, XCG-SX97E, and XCG-5005E feature critical camera functions for security applications such as IR wavelength coverage (XCG-SX99E and XCG-SX97E) and ultra-high 5-megapixel resolution (XCG-5005E).

The XCG camera series offers choice, flexibility, and high image quality options to match your specific inspection application requirements. By utilizing the features and benefits of the GigE Vision interface, the XCG Series expands the possibilities for factory automation and security applications, while also delivering the potential of significant cost savings.

Table 1: Full Lineup

		XCG-5005E	XCG-U100E	XCG-SX99E	XCG-SX97E	XCG-V60E
		Ultra-high Resolution	High Resolution	IR Sensitivity	IR Sensitivity	High Speed
Sensor	Progressive Scan IT CCD	2/3 type	1/1.8 type	2/3-type	2/3 type	1/3 type
	Cell Size (H) x (V)	3.45 x 3.45 μm	4.4 x 4.4 μm	6.45 x 6.45 μm	6.45 x 6.45 μm	7.4 x 7.4 μm
	Standard Picture Size (H) x (V)	2,448 x 2,048	1,600 x 1,200 (UXGA)	1,360 x 1,024 (SXGA)	1,360 x 1,024 (SXGA)	640 x 480 (VGA)
	Frame Rate	15 fps	15 fps	27 fps	16 fps	90 fps
Applications		High-end Security Factory Automation	Factory Automation	High-end Security Factory Automation	High-end Security Factory Automation	Factory Automation

Full lineup: XCG-5005E, XCG-U100E, XCG-SX99E, XCG-SX97E, XCG-V60E

With a variety of resolutions and feature-rich benefits, it's never been easier to select the right camera for your specific factory automation, machine vision, and high-end security applications.

Please refer to table 1.

GigE Vision Interface

The adoption of the GigE Vision interface adds to the outstanding value and performance of the XCG camera series. Answering the growing demand for large-scale systems, the XCG Series can transfer large data over long distances (up to 100m). In addition, the cameras are reinforced with a packet re-send mechanism that can eliminate the loss of transferred data. Furthermore, the overall cost of a vision system can be reduced with these cameras thanks to the availability of a variety of peripheral devices.

Please refer to table 2.

Driver for the XCG Series

The XCG Series is equipped with a Sony-provided, dedicated driver. This image filter driver enables jumbo-packet data transfer across all industry-standard hardware. It is also capable of non-GigE Vision data transfer in GigE Vision environments.

Bulk Trigger Mode/Sequential Trigger Mode

The XCG Series features an advanced Bulk Trigger Mode and Sequential Trigger Mode, in addition to its conventional trigger mode. Bulk Trigger Mode allows the XCG Series to capture up to 16 images in rapid succession using a single software or hardware trigger. Sequential Trigger Mode periodically sends a software or hardware trigger to the camera to capture the successive images. With the cameras' memory channel, up to 16 different settings can be called up to capture these images. Thanks to these beneficial trigger options, the XCG Series reduces the need to receive signals from the host PC.

High Resistance to Shock and Vibration

Thanks to their robustness and vibration resistance, the XCG Series cameras deliver outstanding performance in the most challenging environmental conditions.

GigE Vision Interface

Full Line-up

Bulk Trigger Mode/Sequential Trigger Mode

High Resolution to Shock and Vibration

Vertical and Horizontal Partial Scanning


Vertical Binning

Other Features

Vertical and Horizontal Partial Scanning

Vertical Binning

Tripod Adaptor
VCT-ST70I

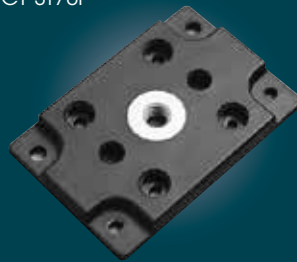

Camera Adaptor
DC-700CE




Cables

- CCXC-12P02N
- CCXC-12P05N
- CCXC-12P10N
- CCXC-12P25N

Table 2: Interface Comparison


Interfaces	GigE Vision	IEEE1394b
Distance of Image Transfer	Up to 100 m	Up to 4.5 m
Bandwidth of Image Transfer	1000 Mbps	800 Mbps
Data Transfer	Packet Transfer	Packet Transfer
Configuration (Software)	GenICam	IIDC
System Configuration	A Wide Range of Peripheral Devices	Inexpensive Peripheral Devices

	XCG-5005E	XCG-U100E	XCG-SX99E	XCG-SX97E	XCG-V60E
Image device	2/3 type progressive scan IT CCD	1/1.8 type progressive scan IT CCD	2/3-type progressive scan IT CCD	2/3 type progressive scan IT CCD	1/3 type progressive scan IT CCD
Cell size (H) × (V)	3.45 x 3.45 μm	4.4 x 4.4 μm	6.45 x 6.45 μm	6.45 x 6.45 μm	7.4 x 7.4 μm
Standard picture size (H × V)	2,448 x 2,048 pixels	1,600 x 1,200 pixels	1,360 x 1,024 pixels	1,360 x 1,024 pixels	640 x 480 pixels
Resolution depth	8/10/12 bits/pixel				
Lens mount	C mount				
Standard frame rate	15 fps	15 fps	27 fps	16 fps	90 fps
Digital interface	1000BASE-T (GigE Vision compatible)				
Sensitivity	400 lx at F5.6 (0 dB)	400 lx at F5.6 (0 dB)	400 lx at F8 (0 dB)	400 lx at F11 (0 dB)	400 lx at F5.6 (0 dB)
Minimum illumination	Less than 1 lx (Gain +18 dB, F1.4)	Less than 1 lx (Gain +18 dB, F1.4)	Less than 0.4 lx (Gain +18 dB, F1.4)	Less than 0.2 lx (Gain +18 dB, F1.4)	Less than 1 lx (Gain +18 dB, F1.4)
Gain control	Manual 0 dB to +18 dB, Auto gain				
Readout mode	Normal/Binning/Partial scan				
Binning	Vertical (1 x 2)				
Partial scan	Vertical/Horizontal				
Shutter speed	2 s to 1/100,000 s				
External trigger shutter	Pulse-edge detection mode, Pulse-width detection mode, Special trigger mode (Bulk trigger mode/Sequential trigger mode)				
Memory channel	16 channels				
Readout features	Binarisation, Gamma correction (LUT), Built-in test pattern				
Power requirements	DC 10.5 V to 15 V				
Power consumption (Max.)	4.3 W	3.1 W	3.6 W	3.1 W	3.1 W
Dimensions	44 x 33 x 67.5 mm (1 3/4 x 1 5/16 x 2 3/4 inches)				
Mass	Less than 145 g (5 3/4 oz)				
Operating temperature	-5°C to +45°C (23°F to 113°F)				
Storage temperature	-30°C to +60°C (-22°F to +140°F)				
Operating humidity	20% to 80% (no condensation)				
Storage humidity	20% to 95% (no condensation)				
Vibration resistance	10 G (20 Hz to 200 Hz)				
Shock resistance	70 G				
Supplied Accessories	Lens mount cap (1), Operating instructions (1)				

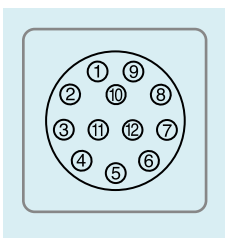

12-pin connector

Pin No.	Signal
1	DC IN (Ground)
2	DC IN
3	GND
4	Strobe/Exposure OUT
5	ISO OUT- (Isolated)
6	ISO OUT+ (Isolated)
7	ISO IN+ (Isolated)
8	GND
9	NC
10	NC
11	Trigger IN
12	ISO IN- (Isolated)

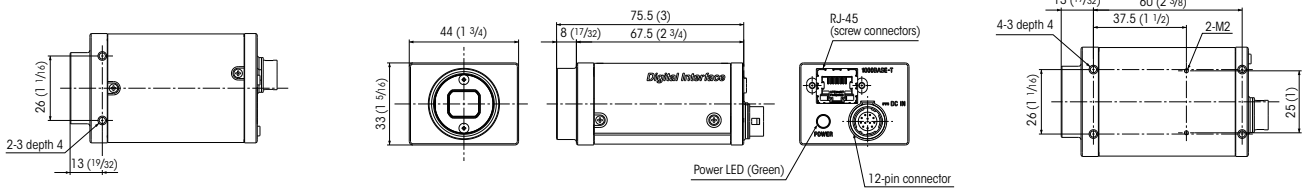

Distributed by

©2012 Sony Corporation. All rights reserved. Reproduction in whole or in part without written permission is prohibited. Features and specifications are subject to change without notice. The values for weight and dimension are approximate. "SONY", "make.believe" and "EXView HAD CCD II" are registered trademarks of Sony Corporation. All other trademarks are the property of their respective owners.

PHC_27/02/2014

GEN<i>i>CAM **GigE**
VISION

SONY