



XCD-U100/XCD-U100CR



XCD-SX90/XCD-SX90CR



XCD-V60/XCD-V60CR



XCD Series

Digital Camera Modules

XCD-U100/XCD-U100CR
XCD-SX90/XCD-SX90CR
XCD-V60/XCD-V60CR

The new Sony XCD Series – with the IEEE1394b Interface and a number of resolutions and frame rates to choose from – selecting the right camera for your machine vision application has never been easier.

XCD-U100 XCD-U100CR XCD-SX90 XCD-SX90CR XCD-V60 XCD-V60CR



Sony, a renowned leader in digital camera technology, is introducing six new models to its **XCD Series**: the XCD-U100/U100CR, the XCD-SX90/SX90CR, and the XCD-V60/V60CR.

Featuring outstanding picture quality, high-speed image capturing, and the digital 1394b interface, this new XCD Series is perfect for high-quality industrial and manufacturing solutions.

The XCD-U100/U100CR incorporates a 1/1.8 type IT CCD that captures extremely, high-quality, detailed images with an ultra high resolution of 1600 x 1200 (UXGA). The XCD-SX90/SX90CR employs a Sony unique CCD that achieves a frame rate of up to 30 fps at 1280 x 960 (SXGA) resolution. The XCD-V60/V60CR achieves up to 90 fps at VGA resolution, which is commonly used in many machine vision applications. With this wide range of new solutions – each with feature-rich benefits – it's never been easier to select the right camera for your specific machine vision applications.

The new XCD Series of cameras adopts the IEEE 1394b interface that supports the IIDC protocol. By utilising this interface, users can transfer images to a host PC at speeds of up to 800 Mb/s. Moreover, because multiple cameras can be connected in a daisy-chain configuration, users can enjoy the benefits of simplified operation in a multi-camera system.

When these XCD cameras are daisy-chained, Bus Synchronisation and Broadcast Delivery are available. With Bus Synchronisation, users can capture images from different angles simultaneously simply by sending a single trigger from the host PC.

Broadcast Delivery allows users to capture images from multiple cameras using a software trigger instead of a hardware trigger, which helps to minimise the occurrence of false triggers. This function also enables users to change the settings of multiple cameras simultaneously.

Their compact design and rugged body enables the XCD Series to be integrated into a wide variety of industrial environments. In addition, the XCD Series incorporates other features such as partial scanning, binning, and a hardware LUT (Look Up Table).

The new XCD Series of cameras are ideal for industrial machine vision applications such as object recognition, inspection, measurement, alignment, and for microscopy applications in scientific research.

Excellent Picture Quality/High Frame Rates

The XCD-U100/XCD-U100CR features a UXGA CCD that provides the highest resolution out of all the new XCD cameras. This particular camera is ideal for applications that require the capture of ultra-high image detail. The XCD-SX90/XCD-SX90CR employs an exclusive Sony CCD and achieves up to 30 fps with SXGA image quality. For applications that require high-speed image capture at up to 90 fps, the XCD-V60/XCD-V60CR is the answer.

| XCD-U100 | XCD-U100CR | XCD-SX90 | XCD-SX90CR | XCD-V60 | XCD-V60CR |
|------------------------------------|------------|----------------------------------|------------|-----------------|-----------|
| B&W | Colour | B&W | Colour | B&W | Colour |
| 1/1.8 type progressive scan IT CCD | | 1/3 type progressive scan IT CCD | | | |
| 1600 x 1200 (UXGA) | | 1280 x 960 (SXGA) | | 640 x 480 (VGA) | |
| 15 fps | | 30 fps | | 90 fps | |


IEEE1394b Digital Interface

The new XCD Series employs the IEEE1394b interface which attains high data-transfer rates of up to 800 Mb/s. Since the XCD Series is backward compatible with IEEE1394a, these cameras can be easily integrated with legacy 1394a systems.

Daisy-Chain Configuration

The new XCD cameras are equipped with two IEEE1394b ports allowing multiple cameras to be daisy-chained and controlled from a single PC. A daisy-chain configuration with a large number of cameras*1 is made possible by their EIAJ 12-pin connector, which allows external power to be supplied to the cameras.


*1 up to 62 cameras can be daisy-chained.

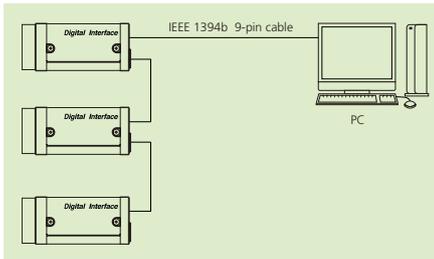

XCD Series

Bus Synchronisation

The new XCD Series also features a bus synchronisation function enabling users to simultaneously capture images from different angles with multiple cameras by sending a single trigger to all cameras from the host PC. This feature is not only useful for viewing images from different angles, but can be used to recreate a 3D image for more detailed inspection.

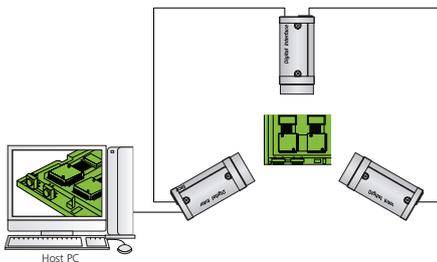

Bus Synchronisation (Reproduction of 3D Images)

Broadcast Delivery

The Broadcast Delivery function of the XCD Series can be used to send a software trigger to multiple cameras in a daisy-chain. This not only facilitates connections, but eliminates the need for using a hardware trigger which can produce false triggers due to noise. In addition, the broadcast delivery function can be used to simultaneously change camera settings such as shutter speed, exposure, white balance, gain, and more.

Image Buffer

The new XCD Series is equipped with an image buffer, which serves as temporary storage for captured images for later transmission or retransmission. This function allows users to maximise bandwidth in multiple-camera operations or reconfirm specific images as required.

Vertical and Horizontal Partial Scanning

By selecting a particular area of an image to be scanned, users of the XCD Series can reduce data size and increase frame rate to minimise processing time.


Vertical and Horizontal Binning*2

The Vertical binning feature of the XCD Series combines image data for every two lines vertically resulting in increased frame rates and reduced processing time. Horizontal binning combines image data for every two pixels horizontally to achieve greater sensitivity, faster capture speeds, and quicker processing.

*2 - Available with the XCD-U100, XCD-SX90 and XCD-V60.

Bulk Trigger Mode

The new XCD Series has a bulk trigger mode to allow the capture of up to 16 images in rapid succession using either a software or hardware trigger. This can be used to capture multiple images of an item at different shutter speeds. By doing so, specific areas of that item can be clearly seen without changing the lighting. Also this allows a composite image with a wide dynamic range to be reproduced.

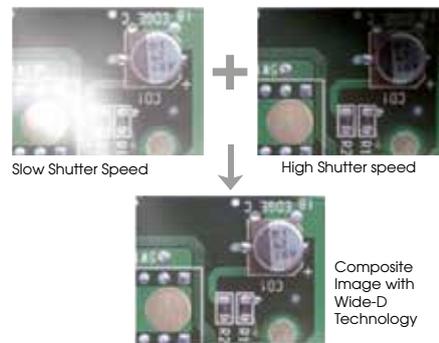

Bulk Trigger Mode (Composite Image) (simulated images)

IEEE1394b Digital Interface

Daisy-Chain Configuration

Image Buffer

Low Power Consumption

Vertical and Horizontal Partial scanning

Other Features

Hardware LUT (Look Up Table)

Built-in Real-time 3x3 Image Pre-processing Filter*2

Low Power Consumption

- XCD-U100/XCD-U100CR (3.0 W)
- XCD-SX90/XCD-SX90CR (2.8 W)
- XCD-V60/XCD-V60CR (2.8 W)

Compact and Lightweight

- 44 x 33 x 57.5 mm (W x H x D)
- 140 g

High shock and vibration resistance

Meets IIDC Ver. 1.31 Specifications


*2 Available with the XCD-U100, XCD-SX90, and XCD-V60.

XCD Series Specifications

Camera

| | XCD-U100 | XCD-U100CR | XCD-SX90 | XCD-SX90CR | XCD-V60 | XCD-V60CR |
|--------------------------------------|---|---|--|---|--|---|
| Image device | 1/1.8 type progressive scan IT CCD | | 1/3 type progressive scan IT CCD | | | |
| Standard picture size (H x V) | 1600 x 1200 (UXGA) | | 1280 x 960 (SXGA) | | 640 x 480 (VGA) | |
| Cell size | 4.4 x 4.4 μm | | 3.75 x 3.75 μm | | 7.4 x 7.4 μm | |
| Resolution depth | Mono 8: 8 bits/pixel Mono 16: 10 bits/pixel | Raw 8: 8 bits/pixel Raw 16: 10 bits/pixel | Mono 8: 8 bits/pixel Mono 16: 10 bits/pixel | Raw 8: 8 bits/pixel Raw 16: 10 bits/pixel | Mono 8: 8 bits/pixel Mono 16: 10 bits/pixel | Raw 8: 8 bits/pixel Raw 16: 10 bits/pixel |
| Lens mount | C mount | | | | | |
| Digital interface | IEEE1394b-2002 x2, bilingual (screw lock possible) | | | | | |
| Transfer rate | 800 / 400 / 200 / 100 Mb/s | | | | | |
| Max. Frame rate (at full resolution) | 15 fps | | 30 fps | | 90 fps | |
| Gain control | Manual 0 to 24 dB, Auto gain | Manual 0 to 18 dB, Auto gain | Manual 0 to 24 dB, Auto gain | Manual 0 to 18 dB, Auto gain | Manual 0 to 24 dB, Auto gain | Manual 0 to 18 dB, Auto gain |
| Shutter speed | 1/100,000 to 16s, Auto shutter | | | | | |
| External trigger shutter | Trigger start (Mode 0), Trigger start and exposure duration (Mode 1), Programmable trigger (via the IEEE1394 bus), Trigger inhibit setting, Trigger/Strobe delay setting, Single/Bulk trigger mode | | | | | |
| Image memory | 16 MB | | | | | |
| Memory channel | 15 channels for parameter settings | | | | | |
| Broadcast delivery | Camera setting, Software trigger via IEEE1394 bus | | | | | |
| Readout features | Partial Scanning, Binning, LUT, 3x3 filter | Partial Scanning, LUT, Bayer Pattern Arrangement, AWB | Partial Scanning, Binning, LUT, 3x3 filter | Partial Scanning, LUT, Bayer Pattern Arrangement, AWB | Partial Scanning, Binning, LUT, 3x3 filter | Partial Scanning, LUT, Bayer Pattern Arrangement, AWB |
| Power requirements | DC 8 to 30 V (via IEEE1394b 9-pin cable or 12-pin camera cable) | | | | | |
| Power consumption | 3.0 W (Typ.) | | 2.8 W (Typ.) | | 2.8 W (Typ.) | |
| Dimensions (W x H x D) | 44 x 33 x 57.5 mm (not including protruding parts) | | | | | |
| Mass | 140 g | | | | | |
| Operating temperature | -5 to 45 °C (23 to 113 °F) | | | | | |
| Storage temperature | -30 to 60 °C (-22 to 140 °F) | | | | | |
| Operating humidity | 20 to 80% (no condensation) | | | | | |
| Storage humidity | 20 to 95% (no condensation) | | | | | |
| Vibration resistance | 10 G (20 to 200 Hz) | | | | | |
| Shock resistance | 70 G | | | | | |
| Supplied accessories | Lens mount cap, Operating instructions | | | | | |


Pin assignment & connector

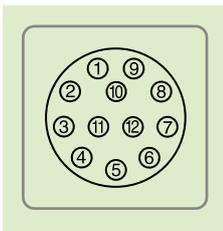

12-pin EIAJ connector

| Pin No. | Signal |
|---------|------------------------|
| 1 | DC IN (Ground) |
| 2 | DC IN |
| 3 | ISO GND |
| 4 | Strobe OUT (Isolated) |
| 5 | GPIO OUT 1- (Isolated) |
| 6 | GPIO OUT 1+ (Isolated) |
| 7 | GPIO IN 1+ (Isolated) |
| 8 | GPIO OUT 2- (Isolated) |
| 9 | GPIO OUT 2+ (Isolated) |
| 10 | GPIO IN 2+ (Isolated) |
| 11 | Trigger IN |
| 12 | ISO GND |

Optional accessories

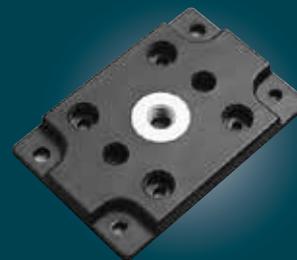

Tripod Adaptor

VCT-ST701
Isolated type
Mass: Approx. 14 g
Dimensions: 40 x 6 x 59 mm
(W x H x D)


Camera Adaptors

DC-700CE

Cables

CCXC-12P02N CCXC-12P05N
CCXC-12P10N CCXC-12P25N

Dimensions (mm)

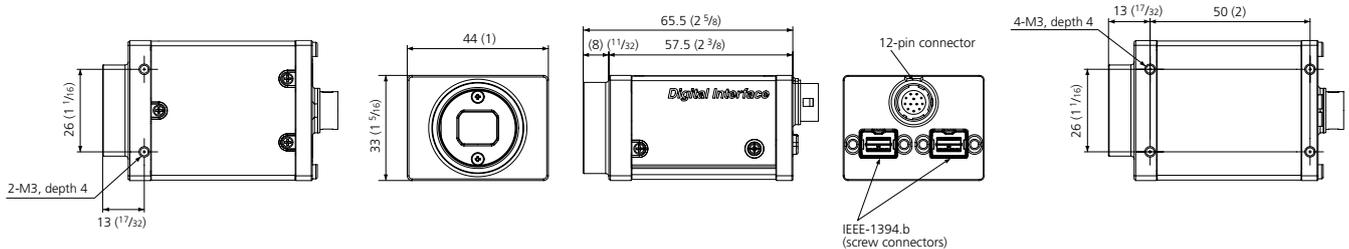

Distributed by

©2012 Sony Corporation. All rights reserved. Reproduction in whole or in part without written permission is prohibited. Features and specifications are subject to change without notice. The values for weight and dimension are approximate. "SONY", "make.believe" and "EXview HAD CCD II" are registered trademarks of Sony Corporation. All other trademarks are the property of their respective owners.

PHC_27/02/2014

SONY